Technical data sheet



Product: 2243

Manufacturer: H.B. FULLER

Product group: **KLEBSTOFF**

Article group: **CYANACRYLAT**

Download: 13.05.2024

CYBERBOND CB 2243

This data sheet was provided to you by Tewipack Uhl GmbH. The company tewipack Uhl GmbH assumes no responsibility for the topicality and the Accuracy of the information contained. The properties of the products can vary due to various influences such as composition and condition of the Substrate, impurities in or on the substrate, temperature and humidity at the Change storage and environmental conditions during use. Using this product in combination with other material, the customer is responsible for to check through our own tests whether the product is suitable for the planned combination and whether this combination delivers the expected results

Sparkasse

Pforzheim

Konto 17 787

Calw



Cyberbond CB

CB 2243

Technical Datasheet

xtraflex Series

- fast bonding
- medium viscosity
- partly flexible
- high temperature resistance
- black

The xtraflex Series stands for partly flexible Cyanoacrylates, also known as rubber toughned. They allow dynamic and temperature loaded bonds and guarantee certain shock absorbence properties. These grades are also excellent for combination bondings like metal to rubber or metal to plastic. CB 2243 is the general purpose black grade out of this range. The visosity allows easy dispensing via e.g. the LINOP dispensing equipment.

Physical properties - monomer (uncured)

Base compound	Ethyl-2-cyanoacrylate
Appearance	black
Density at 20 °C in	1,06
g/cm3	
Flashpoint in °C	85
Shelf life,20 °C,	9
unopend, in months	

Viscosity

1

cone-plate, @20 °C

@ 160 rpm 240-360 mPas

Physical properties - Polymer Appearance black

Appearance black
Service temp range -55 - 140 °C


Setting time [seconds]

30 - 65
4 - 10
5 - 9
> 60

strength of cured adhesive

Substrate	N	I/mm	2
NBR-rubber ▲	5	to	12
steel	12	to	22

▲ material failure

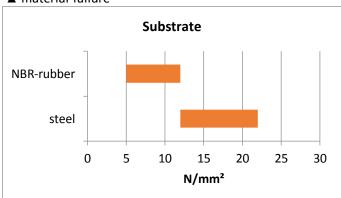


Specification


ISO 10993-5: Test for in vitro Cytotoxicity (biocompatibility).


RoHS conform.

For details and certificates see www.Cyberbond.eu


IATF 16949, ISO 13485, ISO 9001 & ISO 14001 **Cyberbond CB**

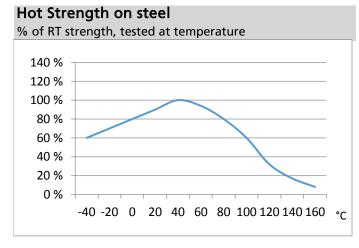

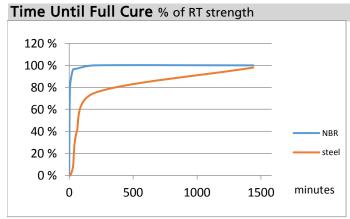

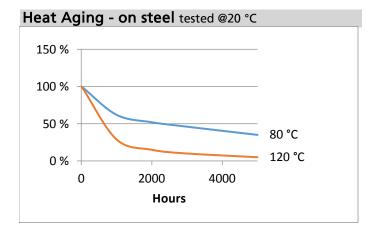

2

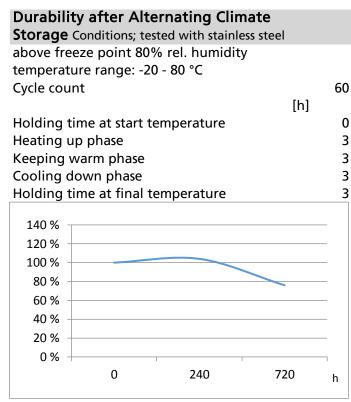

IATF 16949, ISO 13485, ISO 9001 & ISO 14001 Cyberbond CB

Solvent resistance	'A	
Solvent	Example	Resistanc
alcohol	ethanol, methanol	+++
alconor	ethanol, methanol	TTT
ester (aliphatic)	ethyl acetate	
	(acetic acid ethyl	
	ester)	
ketones	acetone,	
	benzophenone	
aliphatic	petrol, heptane,	++
hydrocarbons	hexane	
(alkanes)		
aromatic	benzene, toluene,	++
hydrocarbons	xylene	
halogenated	methylene	
hydrocarbons	chloride,	
	chloroform,	
	chlorobenzene	
weak acqueous	diluted nitric-,	+++
acids	muriatic-, sulfuric-	
	, phosphoric acid	
concentrated acid	nitric acid,	
	muriatic acid,	
	sulfuric acid,	
	phosphoric acid	
weak acqueous	diluted sodium	+++
bases	hydroxide -,	
	caustic potash	
	solution	
concentrated	sodium hydroxide -	
bases	, caustic potash	
	solution	
water		++
iso-propanol		+++
acetone		
mineral oil		++
	لمصما بسميد	

General Information CA

+++ very good ++ good --- very bad

Cyanoacrylates are fast setting, one component and solvent free adhesives. They are based on esters of cyanoacetic acid. To get to a finished product, mainly thickeners, respectively film forming agents (polymer methacrylics and acrylics) and stabilisers are added. The polymerization is initiated by present humidity. Best results are given between 40 to 70 % relative humidity.

Cyberbond standard grades are as follows:

- Powerdrop series (stabilised ethyl ester)
- Elastomer and plastic series (ethyl ester)
- Neomer Series (surface insensitive ethyl ester)
- xtraflex series (rubber toughened ethyl ester)
- metal series (ethyl ester)
- low odour series (alkoxy ester)
- medical series (butyl- and octyl ester)

Measurement of Viscosities

Viscosity describes the flow-ability of a liquid. Cyberbond measures the viscosity of the products by means of the cone/plate method: the liquid is applied on a panel and a defined cone presses the liquid together and rotates.

You differentiate between a Newtonian and a thixotropic liquid. In terms of a Newtonian liquid you will get a relative constant viscosity graph in dependence of the rotary speed of the cone. In terms of thixotropic liquids the product becomes more liquid (down to its base viscosity) the faster the cone rotates.

The viscosity is measured in mPa*s (milli Pascal x second) [SI system] or in cP (centipoise) [CGS- system]; 1 mPa*s = 1 cP.

In order to allow products comparison all adhesives are measured at the same rotation speeds.

- Newtonian liquids at 160 upm
- Thixotropic liquids at 0,5 upm and at 160 upm

Temperature always is at 20 °C / 68 °F, if not mentioned to be different.

Clean Surface

The surface condition of the mating parts has an enormous influence on the success of a bond. To achieve good bonding success the mating parts should be clean.

Additional Programme

In order to support certain applications Cyberbond offers perfectly balanced additional products such as:

- Primer and Conditioner Pen: in order to change surface tension; enables to bond unpolare materials (Standard: CB 9056)
- D-Bonder: in order to dissolve adhesives (Standard: CB 9060, CB 9065, CB 9066)
- Activator: in order to accelerate the curing of adhesives (Standard: CB 9090, CB 9096, Quickstep 9040, Quickstep 9080)
- Cleaner: in order to clean surfaces professionally (Standard: CB 9999)

LINOP Equipment

Cyberbond offers by means of the LINOP Equipment range suitable dosing and LED based curing devices. We also refer to suitable dosing tips which help an economical use of the adhesives (also if used manually).

Storage

Store products in a cold and dark place. Before use allow to reach ambident temperature.

Potential Danger of Cyanoacrylates

You should care for the following:

- use in well ventilated areas only
- install suitable exhaust systems in the workshop
- apply material economically and use a dosing system where appropriate
- allow a consistent relative humidity of 50 to 65 %; with regards to lower figures the polymerization will be delayed and monomer adhesive fume will appear
- if necessary: wear suitable, non-sucking gloves (e.g. no cotton)
- keep adhesive out of reach of children

The data mentioned in this TDS, particularly the recommendations and use of products are based on our recent knowledge and experience. Due to the fact of having so many different materials involved and conditions of applications which are out of our influence, we strongly recommend to do sufficient tests in order to guarantee that Cyberbond products are suitable for the intended process and applications. Except for wilful acts any liability based on such recommendations or any verbal advice is hereby expressly excluded.

For safe handling consult Material Saftey Data Sheet (MSDS).

Cyberbond Europe GmbH A H.B. Fuller Company Werner-von-Siemens-Straße 2 31515 Wunstorf Germany

Tel.: +49 / 50 31 / 95 66 - 0 www.cyberbond.de



Cyberbond CB

IATF 16949, ISO 13485, ISO 9001 & ISO 14001 Cyberbond CB