

Technical data sheet



Product: 98

Manufacturer: H.B. FULLER

Product group: KLEBSTOFF

Article group: ANAEROB

Download: 17.05.2024

CYBERBOND RH 98

This data sheet was provided to you by Tewipack Uhl GmbH. The company tewipack Uhl GmbH assumes no responsibility for the topicality and the Accuracy of the information contained. The properties of the products can vary due to various influences such as composition and condition of the Substrate, impurities in or on the substrate, temperature and humidity at the Change storage and environmental conditions during use. Using this product in combination with other material, the customer is responsible for to check through our own tests whether the product is suitable for the planned combination and whether this combination delivers the expected results

Tewipack Uhl GmbH
Industriestraße 15
D-75382 Althengstett

Telephone:
+49(0)7051/9297-0
Fax:
+49(0)7051/9297-99

E-Mail:
info@tewipack.de
Website:
www.tewipack.de

Managing director:
Alexander Uhl,
Michael Uhl
HRB 330424
Amtsgericht
Stuttgart

Bank details:
Sparkasse
Sindelfingen
Pforzheim
Calw
BLZ 666 500
85
Konto 17 787

Commerzbank
Sindelfingen
BLZ 603 400 71
Konto 8 001 166

Vereinigte
Volksbank AG
Böblingen
BLZ 603 900 00
Konto 80 089
003

Postbank
Stuttgart
BLZ 600 100
70
Konto 146
294 708



RH 98

Technical Datasheet

Profile:

Retainer: High strength, high viscosity, thixotropic, high temperature resistant

Anaerobic adhesive for threads and dynamic loaded cylindrical parts like bearings, studs, rotors etc.

Physical properties - monomer

Base compound	Dimethacrylate
Appearance	Green
Gap filling capacity	0,10 - 0,30 mm
Fluorescent	No
Density at 20 °C	1,12 g/cm ³
Shelf life at 20 °C in unopened bottles	12 months
Maximum thread	M 36


Viscosity

Cone / Plate, measured

at 20 °C

@ 0.5 s⁻¹ 15.000 - 35.000 mPas

@ 160 s⁻¹ 900 - 1.400 mPas

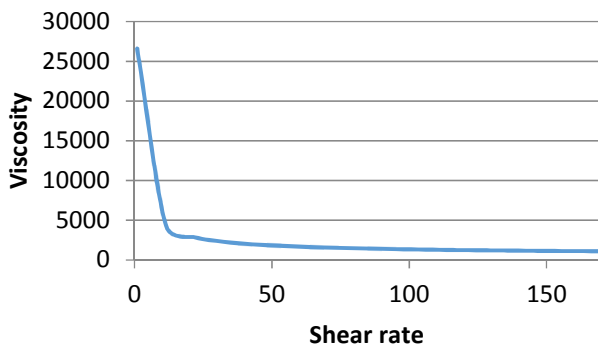

Physical properties - Polymer


Full cure time [hours]	24
Appearance	Green
Temperature range	-50 - 200 °C

Setting time at 23 °C

M10 brass bolt/nut	10 - 30 seconds
--------------------	-----------------

Adhesive strength

Substrate	Nm
Steel	24 to 40
Stainless steel V2A	14 to 24
Galvanized steel	20 to 30
Brass	20 to 30

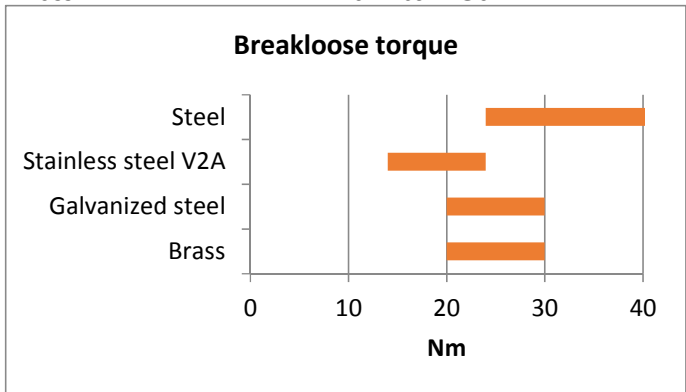

Breakloose torque on M10 bolts and nuts in Nm according to DIN 54454, free swimming without on-torque.

Shear strength

Steel pin/collar specimen, after 24 h 24 - 44 N/mm²

Safety Information for Anaerobic Adhesives

Please consult the MSDS (Material Safety Data Sheet) before using. Keep the workplace clean and use in well ventilated areas only. Install suitable exhaust system at the workplace. Wear suitable safety glasses and gloves.

Solvent resistance

Solvent	Example	Resistance
alcohols	ethanol, methanol, isopropyl alcohol	+
esters	ethylacetate, benzoic benzyl ester	+
other liquids	water, freon, diesel oil	+
other liquids	ammonium hydroxide, bromine, chlorine, hydrobromic acid, lithium hydroxid, perchloric acid, potassium hydroxide	-
gases	acetylene, argon, butane, ethane, nitrogen	+
gases	ammonia, freon gas, oxygen (pure and /or oxygen rich systems)	-

General Information about Anaerobic Adhesives

Anaerobic adhesives and sealants cure by means of metal contact and/or due to the absence of air. Due to these facts they are only suitable for bonding and sealing metals. Therefore, as such they are not traditional adhesives as commonly known, but are specifically good for the bonding of metal cylindrical parts where torsion-load and shearing-load play an important part. Furthermore, anaerobics are excellent sealants for threads and flanges. Anaerobics are solvent free, one component adhesives.

There are active metals (construction steel, tool steel, free cutting steel, brass, copper) and inactive metals (high alloyed or stainless steel, aluminium, electroplated surfaces, cast iron). While products used on active metals cure very fast, the same products need longer times to cure when used on inactive metals. But this does not influence the intended strength.

Storage

Store products in a cold and dark place. Optimal storage temperature range is between 8 °C - 21 °C.

Measurement of Viscosity

Viscosity describes the flow-ability of a liquid.

Cyberbond measures the viscosity of the products by means of the cone/plate method: the liquid is applied on a panel and a defined cone presses the liquid together and rotates.

You differentiate between a Newtonian and a thixotropic liquid. In terms of a Newtonian liquid you will get a relative constant viscosity graph in dependence of the rotary speed of the cone. In terms of thixotropic liquids the product becomes more liquid (down to its base viscosity) the faster the cone rotates.

The viscosity is measured in mPa*s.

Clean Surface

The surface condition of the mating parts has an enormous influence on the success of a bond. To achieve good bonding success the mating parts should be clean. A certain amount of e.g. oil can be tolerated.

Additional Programme

In order to support certain applications Cyberbond offers perfectly balanced additional products such as:

- Activator: in order to accelerate the curing of adhesives (Standard: CB 9191)
- Cleaner: in order to clean surfaces professionally (Standard: CB 9999)

LINOP Equipment

Cyberbond offers by means of the LINOP Equipment range suitable dosing and LED based curing devices.

We also refer to suitable dosing tips which help an economical use of the adhesives (also if used manually).

The data mentioned in this TDS, particularly the recommendations and use of products are based on our recent knowledge and experience. Due to the fact of having so many different materials involved and conditions of applications which are out of our influence, we strongly recommend to do sufficient tests in order to guarantee that Cyberbond products are suitable for the intended process and applications. Except for wilful acts any liability based on such recommendations or any verbal advice is hereby expressly excluded.

For safe handling information on this product, consult the Material Safety Data Sheet (MSDS).

Cyberbond Europe GmbH
A H.B. Fuller Company
Werner-von-Siemens-Straße 2
31515 Wunstorf
Germany
Tel.: +49 / 50 31 / 95 66 - 0
www.cyberbond.de



H.B. Fuller

Cyberbond CB